



Phone telescopic extension lens

Instruction Manual



Please read all
instructions carefully and
retain for future
reference.

Getting Started

- Remove the lens and accessories from the box.
- Remove packaging and place inside the box to store for future reference and / or use.

In the Box

- Telescopic extension lens
- Cleaning cloth
- Universal holder.
- Mini tripod
- 2 phone protection cases [For iPhone 3 & iPhone 4]
- Instruction manual


Safety Instructions

- Do not use telescopic extension lens to look at the Sun or bright light source, as it may cause instant and irreversible damage to your eye. Eye damage is often painless, hence there is no warning to the observer that the damage has occurred until it is too late.
- Do not expose telescopic extension lens to sudden temperature changes as this will result in fogging of the optics. If this occurs, allow the product to adjust to the environment temperature after which fogging should clear.
- Place the tripod on a stable, level surface free from vibrations and away from sources of heat.
- Keep free from dust, lint, hair, etc.
- Do not use this unit for anything other than its intended use.
- Keep this product out of reach of children.
- This product is not a toy.

Description of Parts



 Diagram of Universal holder



Instructions for use


- In order to ensure maximum stability extend all the legs of the tripod out as far as possible.
- Put the iPhone into the iPhone case. Make sure your phone is compatible with the case, failing to do so may cause damage or scratches on your iPhone.
- Attach telescopic extension lens to the iPhone case by screwing the lens clockwise onto the bracket until it is tightly fixed.



- Pull up the metallic, flexible handle and place the jacket in it.



- (1) Screw the universal holder to the tripod, and (2) tighten the knurled nut towards the holder in order to hold it in place.

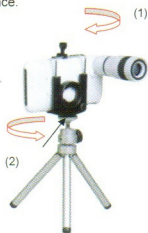

Tighten the locking screw (3) clockwise to prevent the movement of the attached iPhone.

- If the camera of the iPhone cannot take a clear image, you may manually fine-tune the focus by adjusting the focal ring (4) which is located in the front portion of the lens.
For long distance focus (e.g. focusing to infinity), turn the ring clockwise until the image is sharp and clear (Care must be taken to avoid screwing off the telescopic extension lens from the phone case).
For close focus, turn the ring anti-clockwise until the image is sharp and clear.



Care & maintenance

- Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives.
- Keep this product away from wet or damp surroundings.
- Position the tripod on a flat stable surface to avoid overturn when using the mini tripod with your phone and telescopic extension lens.
- To avoid overturn, make sure the phone is well balanced when it is attached to the tripod, especially when the telescopic extension lens is also attached to the phone bracket, failing to do so, may cause damage to the iPhone and / or the lens.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of sixty (60) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

WARRANTY PERFORMANCE: During the above 60 day warranty period, a product with a defect will be

either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 60 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.