

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

### READ ALL INSTRUCTIONS BEFORE USE

1. Do not operate the Wine Enthusiast Electric Blue Push-Button Corkscrew with a damaged cord or plug, after the appliance malfunctions or if it is dropped or damaged in any manner. Return appliance to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment.
2. To protect against risk of electrical shock, do not put the Wine Enthusiast Electric Blue Push-Button Corkscrew in water or other liquid. This may cause personal injury and/or damage to the product.
3. To protect against fire, do not operate the unit in the presence of explosive and/or flammable fumes.
4. Do not use the Wine Enthusiast Electric Blue Push-Button Corkscrew for other than intended use.
5. This product is intended for normal domestic household use only.
6. When using or recharging the Wine Enthusiast Electric Blue Push-Button Corkscrew keep your workspace clean and free from potential hazards.
7. For indoor use only. Do not expose the Wine Enthusiast Electric Blue Push-Button Corkscrew or charging unit to rain or other extreme conditions.
8. Never force the Wine Enthusiast Electric Blue Push-Button Corkscrew onto a bottle or attempt to speed up the mechanism. The electric wine opener will work best when it is operated at it's intended speed.
9. Do not touch or adjust the Wine Enthusiast Electric Blue Push-Button Corkscrew's mechanism or the corkscrew spiral. Only hold the electric wine opener by its plastic housing.
10. Do not attempt to open bottles if the switch is not working correctly.
11. Do not attempt to open the Wine Enthusiast Electric Blue Push-Button Corkscrew or the recharging unit. It has no serviceable parts. Your electric wine opener is guaranteed for one year. In the event of a malfunction in this time please contact our customer services department.
12. Only recharge the Wine Enthusiast Electric Blue Push-Button Corkscrew using the recharging unit and power cord supplied.
13. Never remove the plug from the socket by pulling the power cord.

**CAUTION: Corkscrew is sharp. Handle carefully. Keep hands and utensils out of the container while operating to prevent the possibility of severe personal injury and/or damage to the product or property.**

Before you use this product for the first time, please take a few moments to read these instructions and keep it for reference.

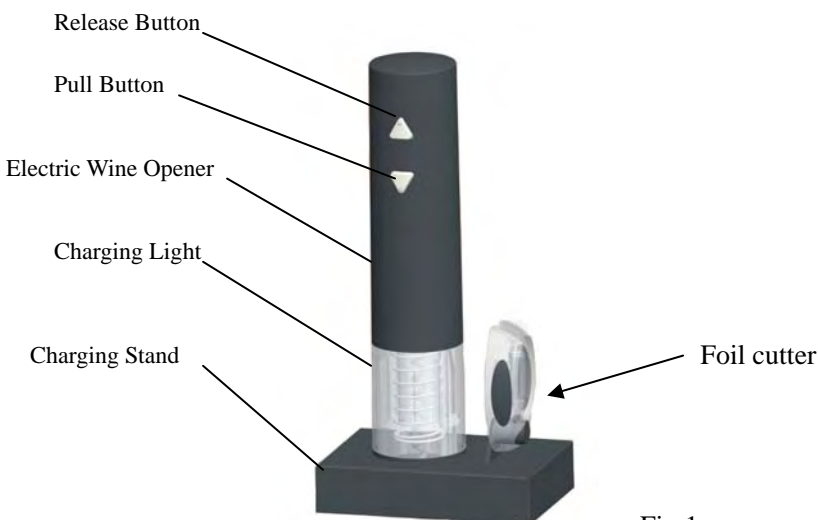


Fig 1

## OPERATING INSTRUCTIONS

We recommend that you charge your Wine Enthusiast Electric Blue Push-Button Corkscrew for at least eight hours before using it for the first time. Please follow the instructions for recharging below:

**Recharging your Wine Enthusiast Electric Blue Push-Button Corkscrew.** Plug one end of the adaptor cord into the base of the recharging unit and the other end into a main socket. Place the Wine Enthusiast Electric Blue Push-Button Corkscrew into recharging unit ensuring that it is firmly in position and that it is fully engaged with the recharging connection. It will take approximately 6-8 hours to recharge your Wine Enthusiast Electric Blue Push-Button Corkscrew, it can use be used to open approximately 40 bottles when fully recharged.

### To Operate your Wine Enthusiast Electric Blue Push-Button Corkscrew

1. Before remove the cork you must remove any foil from the bottle using the cutter provided (see fig.2)



2. Place the Wine Enthusiast Electric Blue Push-Button Corkscrew on top of the wine bottle making sure that it remains as upright as possible at all times. If you hold the Wine Enthusiast Electric Blue Push-Button Corkscrew at an angle to the bottle it will not remove the cork properly. (see fig.3)



3. Hold the Wine Enthusiast Electric Blue Push-Button Corkscrew firmly and depress the down button, the corkscrew spiral will turn in a clockwise direction and enter the cork, then gradually remove it from the bottle. When the Wine Enthusiast Electric Blue Push-Button Corkscrew mechanism stops the cork has been fully removed from the bottle.
4. Lift the Wine Enthusiast Electric Blue Push-Button Corkscrew away from the bottle. To remove the cork simply depress the release button and the spiral will turn in an anticlockwise direction and release the cork.(see fig.4)



5. Always return the electric wine opener to the recharging unit when finished with it. This will protect the mechanism while it is not in use.